



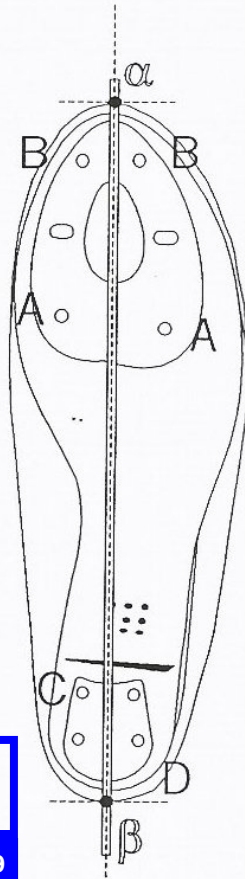

Suggestions on How to MOUNT BLADES ON EDEA Boots

- 1- Check the right length of the blade.
In the back the blade should be in the middle of the heel
in the front the blade should be right before the curved sole, to get the toe pick below the toe.
- 2- The right position of the blade is when the toe picks will be over the highest point α of the boot and the tail of the blade on the lowest point β of the boot. (Do not consider the sole).
- 3- Set the blade on the sole and mark all the holes.
- 4- Remove the blade and **drill** with **2,5mm** or **5/64's** bit.
In the front you have to drill **all the way through** so you have to remove the inner sole and lift the insole cover first.
In the back, because of the ventilation chambers, you have to drill approx. 20 mm deep.
The drilling and the screwing operation should be on **very slow speed** in order not to melt the material.
- 5- Place the blade and all the EDEA screws and tight in the following order: A, A, C, D, B, B.

After the blade is attached in the right position, we recommend to mount all the screws !!

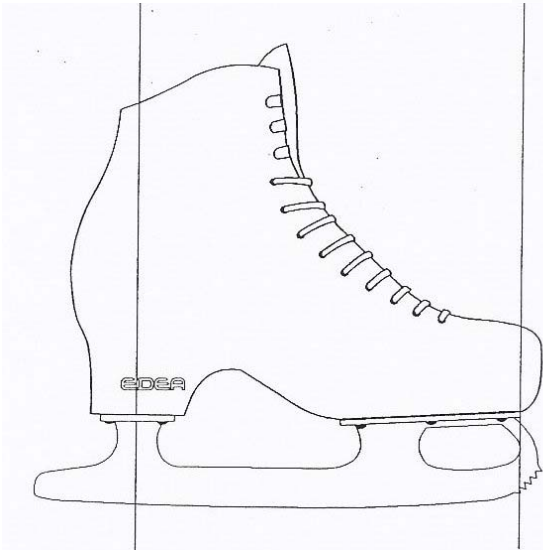

SUGGESTED EDEA to BLADE SIZE Mounting Chart

Boot Size	Blade Length	
	Left	Right
195	265	275
200	255	280
205	245	285
210	235	290
215	225	295
220	215	300
225	205	305
230	200	310
235	195	
240	190	
245	185	
250	180	
255	175	
260	170	
265	165	
270	160	
275	155	
280	150	
285	145	
290	140	
295	135	
300	130	
305	125	
310	120	

Blades in THIRDS of an Inch (1/3)

Blade Size	Blade Length
7 1/3	265
7 2/3	275
8	280
8 2/3	285
9	290
9 1/3	295
9 2/3	300
10	305
10 1/3	310
10 2/3	
11	
11 1/3	

Blades in FOURTHS of an Inch (1/4)

Blade Size	Blade Length
7 1/4	265
7 1/2	275
8	280
8 1/2	285
9	290
9 1/4	295
9 3/4	300
10	305
10 1/4	310
10 3/4	
11	
11 1/2	

Skates US, Inc.

415 West Eaton Pike Richmond, IN 47374-2639
 (765) 935-7477 fax (765) 935-7033
www.SkatesUS.com
 OrderDesk@SkatesUS.com